

glasstech, inc.

Service Bulletin

Customer Service Department

TELEPHONE: 419-661-9000 FAX: 419-661-9639


INTERNET: <http://www.glasstech.com>

E-mail: service@glasstech.com

24Vdc Power Supply Connections


Reference 022

The output connections for the 24VDC power supply, Glasstech part number E-PPS5TLS2241E1, used in Furnace Control panels are to be inspected to ensure that the jumpers between +OUT & +S and -OUT & -S are in place. The +S and -S terminals are used by the power supply to sense the output voltage and maintain a regulated nominal 24VDC output.

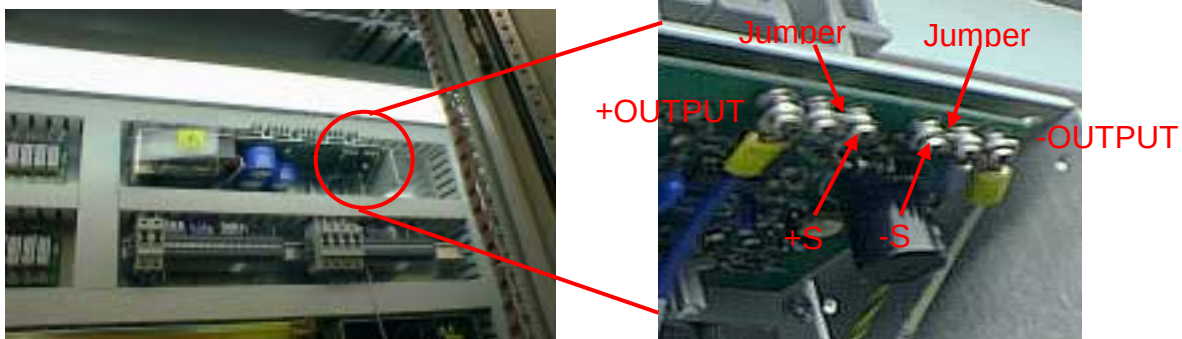

The jumpers consist of a conductive metal strap placed between the:
+S terminal and the closest +OUTPUT terminal,
-S terminal and the closest -OUTPUT terminal.

The schematic, shown here indicates the proper connections.

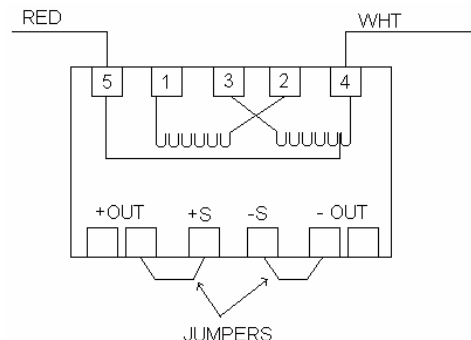

It is possible that if the jumpers are not in place the system may work properly, however it may exhibit erratic behavior in certain components. If the load is disconnect from the 24V supply the output voltage will change from the nominal 24VDC to a higher value do to the loss of the sense lead connections via the load connections.